




T110 SMART TRAINER

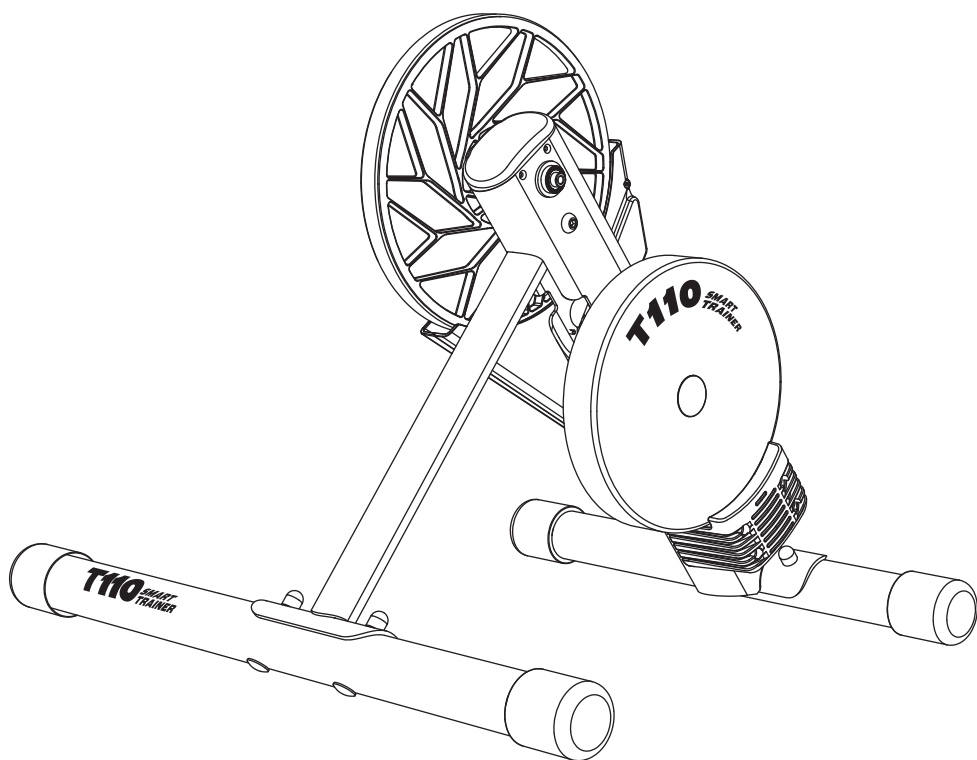

**RIDE ON
POWER UP
REACH BEYOND**

**Quick Start Guide
And Instructions**

Quick Start Guide And Instructions

Thank you for purchasing the T110 Smart Trainer.
Please read the instructions carefully before using it.

If you have any questions, please contact us immediately:

- Email: support@magenefitness.com
- Website: www.magenefitness.com


Caution!

- There is a wide range of bike models, and we cannot guarantee that the trainer is compatible with each bike. Therefore, we recommend that you visit your local bike store to test your bike for compatibility before purchasing the trainer, thus avoiding damage to your bike's frame.
- Modifications to the trainer to make it compatible with your bike, including (but not limited to) grinding components, adding spacers or improperly reversing the adapters, are strictly prohibited and will void your warranty and increase risk. The manufacturer is not responsible for any damage or injury caused by improper installation and use of the trainer, or misuse of accessories.
- User should weigh less than 100kg.
- Before beginning or modifying any workout program please consult your physician.
- Keep children and pets away from the trainer while in use.
- Do NOT put hands or objects near moving parts of the trainer.
- Only use the trainer on a stable, level surface.
- Do NOT attempt to dismount or assemble the bicycle while the trainer is in motion.
- Use caution when standing while riding on the trainer.
- Keep the trainer away from water, fire and other barriers.
- Only use the power adapter that comes with the trainer.
- Only use accessories that comes with the trainer.
- Check to make sure the bicycle is properly secured to the trainer before every ride.

Unpacking

After you take out the trainer and accessories from the package, please make sure to keep the original product packaging for future transportation or storage. When encountering after-sales problems, please be sure to use the original packaging for mailing; the manufacturer will not be responsible for any damage caused by mailing in non-original packaging. If the original packaging is lost, please contact your local distributor or after-sales service personnel.


- ① T110 Smart Trainer ② AC Power Adapter ③ Hex Tool
- ④ Quick Release Skewer ⑤ Freehub Body Spacer
- ⑥ Adapter A - Quick Release End Cap (installed already)
- ⑦ Adapter B - For 130mm and 135mm Quick Release

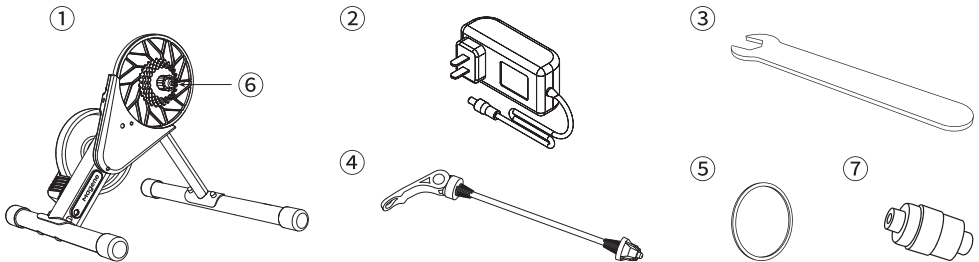


Caution:

1. The following diagrams of tools and accessories are printed only to illustrate the use of the product, and the configuration of the real product parts is subject to the packing list.


Trainer Setup

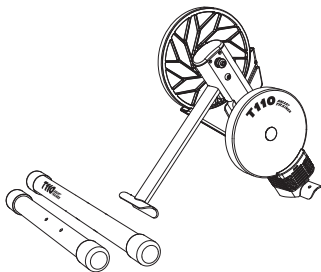


1. Remove the main trainer unit from the box, and expand the trainer.

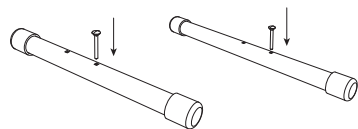

2. Take out the legs and insert them into the bolts (note that the square hole of the arm is at the bottom and the round hole is at the top).

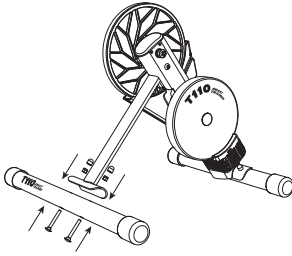


3. Install the legs on the trainer, and then tighten the nuts and install the protective caps.

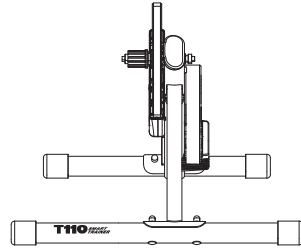


4. When installing, pay attention to the left and right direction of the legs, the long side should be placed near the drive side.

Installing Cassette


Before installation, please prepare cassette, wrench and sleeve.

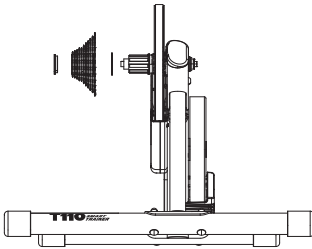


1. To install a compatible 9, 8 or 10 speed cassette, it will be necessary to use the included 1.8mm spacer, but not so for 11 speed cassette.

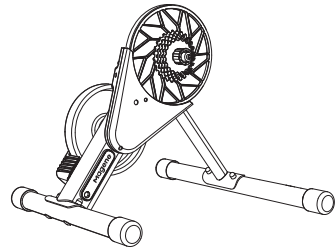

2. Put the cassette onto the freehub in order from big to small size accordingly, paying attention to the alignment of the freehub spline.

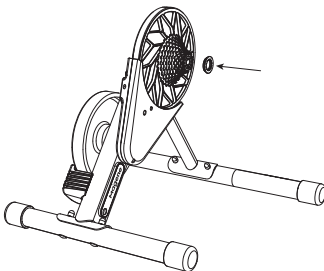


3. Install the cassette cover and tighten it roughly by hand.

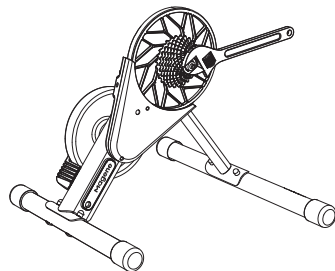


4. Insert the cassette sleeve and use the wrench to tighten the cassette again.

Installing Quick Release

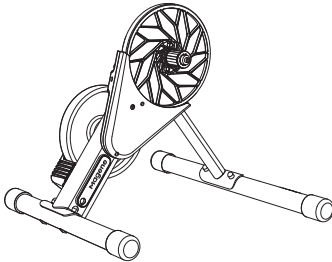


1. The quick release end cap on the freehub has been installed by the manufacturer.

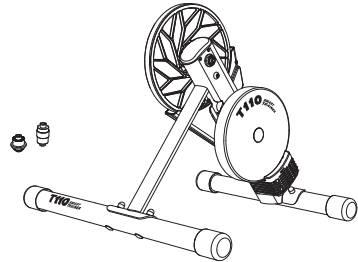


2. Choose the quick release matching the specification of your bicycle, and insert the quick release adapter into the non-drive side of the trainer.


3. Insert the quick release skewer into the non-drive side of the trainer; insert the conical springs into the left and right ends of the quick release skewer separately, with the tips facing inward, and then screw on the nuts.

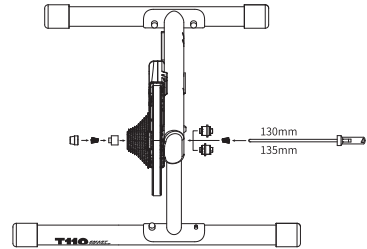


Attaching Your Bicycle (Quick Release)

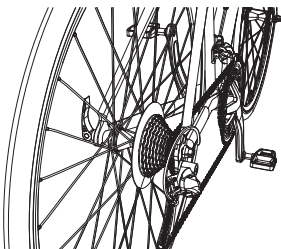

1. Shift your bicycle chain into the smallest sprocket in the front and rear.

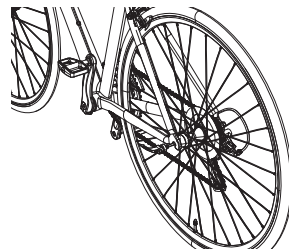

2. Release the rear brake, open the quick release skewer, lift the bicycle frame, and then remove your rear wheel.

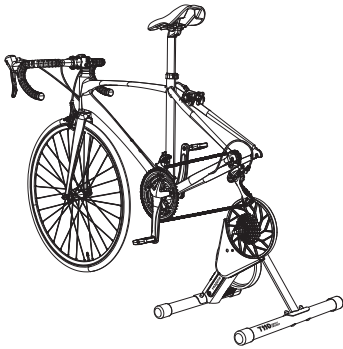


3. Push the quick release skewer on the trainer to the “open” mode, seat the bike on the trainer, and then align the chain with the smallest sprocket on the trainer.

5. Tighten the quick release nuts while turning the quick release skewer on and off frequently until resistance is felt.

6. Lock the thru axle and wiggle the bicycle frame to ensure that the frame does not fall off from the trainer.



4. Lift the front wheel up while pressing down on the saddle to ensure the bicycle is fully seated on the trainer.

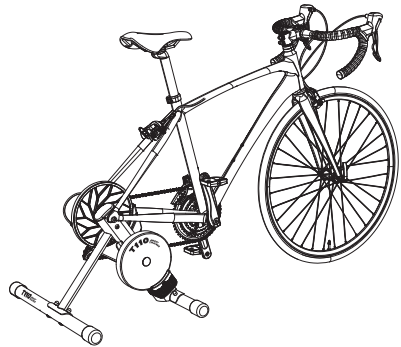

Warning!

- It may cause property loss or personal injury if the quick release lever is not properly fixed.
- If you cannot confirm the correct installation, please contact your local professional bicycle shop or contact us.
- Do not use the quick release lever if it is not properly installed.
- Before each ride, check the tightness and fix the unit to avoid injury or bike frame damage.
- Never adjust the quick release lever when someone is sitting or standing on the bike.

Activating And Performing A Spin Down

CAUTION! The new product must be activated before first use.

1. Turn on Bluetooth of your cell phone.
2. Download Magene Utility App and connect to the trainer.
3. Select your device to connect and activate.




CAUTION! A spin down should performed for the new product before first use.

1. Download Magene Utility App and connect to the trainer.
2. Ride with 150W power for 10 minutes to achieve the best efficiency of the drive chain.
3. Follow the prompts for a spin down.
4. The spin down should be repeated once every two weeks to ensure accurate power measurement.

Connecting Trainer

Note! The hardware and software you use must support BLE 4.0 and above version. A PC without built-in Bluetooth may be used with a Bluetooth receiver (sold separately).

1. Power on the trainer and the indicator light on the housing will illuminate.
2. Download Onelap App and register your account.
3. Select the sports mode as "bike".
4. Select the corresponding trainer in the device list to connect.
5. Select your workout program and start riding.

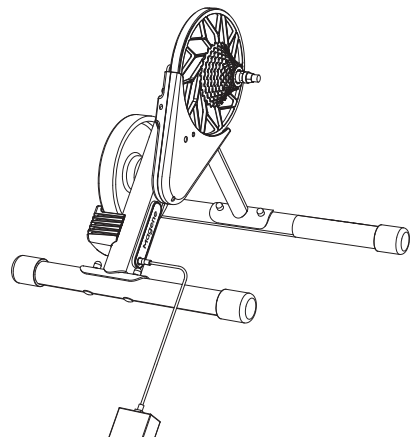


Modes And Indicators

There are two indicators on the trainer.

LED indicator description

System status indicator	
Power-on status	The red and blue indicator flash twice alternatively
Standby status	The blue indicator flashes
Riding status	The blue indicator is on
Connection indicator	
Not connected	The blue indicator flashes
Connected	The blue indicator is on

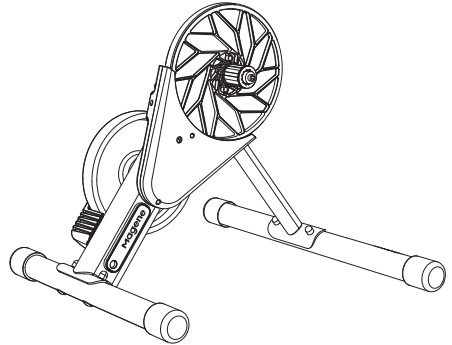

Product Specification

Max power	600W
Maximum simulated slope	6%
Power accuracy	±5%
Rotational inertia	30000kg*mm ²
Noise level	<56dB(@1.5m&30km/h)
Wireless protocol	Bluetooth
Size (unfolded)	600*500*450
Size (folded)	600*250*510
Overall weight	9.7kg
Compatible cassette	Shimano, SRAM 8-11 speed cassette
Compatible bicycle frame	130/135mm Quick Release
Compatible wheels	26"~29"MTB/700C RD